



CFM Corporation reserves the right to make changes in design, materials, specifications, prices and discontinue colors and products at any time, without notice.

Encore Woodburning Stove

Model 2550

Item Description	Part Number
1. Secondary Air Cover Plate	1601492
2. Secondary Air Probe Assy	1601489
3. Secondary Air Link II, ENC	1601486
4. Secondary Air Flap	1601490
5. Flue Collar (8")	See Chart Pg. 35
6. Back	1308620

Item Description	Part Number
7. Left Heat Deflector	1608629
8. Right Heat Deflector	1608630
9. Refractory Assy w/Access Panel	1602510
10. Catalytic Combustor	1602505
11. Refractory Access Panel	1602511
14. Left Griddle Quad	1301807

Encore Woodburning Stove

Model 2550 (continued)

Item Description	Part Number
15. Right Griddle Quad	1301832
16. Griddle	1300797
17. Griddle Handle Assy	30002775
18. Top	See Chart Pg. 35
21. Wedge	1301810
22. Upper Fireback ¹	1308644
23. Damper ¹	1308631
24. Damper Tabs (3) ¹	1601488
25. Damper Rod ¹	1600851
27. Combustion Throat Hood	1301145
28. Lower Fireback	1308646
30. Damper Handle Screw 1/4-20 x 3/8" NT	1201294
31. Damper Handle, Wood	1600664
33. Steel Handle Stub	30002720
34. Left Side	See Chart Pg. 35
35. Left Air Plate (Inner side)	1308621
36. Right Air Plate (Inner side)	1308622
37. Right Side	See Chart Pg. 35
38. Thermostat Handle Assy	5004224
39. Thermostat Assy	5005470
40. Grate	1307434
41. Primary Air Tube Cover Plate	1308609
42. Primary Air Frame	1307411
Primary Air Valve Only	1301412
Primary Air Rod Only	1601493
43. Primary Air Regulatory System	5000337
44. Bottom	1308604
45. Ashlip	See Chart Pg. 35
50. Andiron (2)	1307419
51. Leg	See Chart Pg. 35
52. Leg Leveler	1201745
53. Ashdrop	1308603
54. Pawl Assembly Short Adjustment	30002362
55. Ashdoor	1308607

Item Description	Part Number
56. Ashdoor Handle (Wood)	1600663
57. Ashdoor Hinge Pin	1208608
58. Cotter Pin, Ashdoor	30001749
59. Ashdoor Hinge Support	1308605
60. Ashpan	1601025
61. Ashpan Bracket	1601039
62. Ashpan Cover	1601027
70. Airwash Manifold	1308615
71. Front II	See Chart Pg. 35
72. Left Door Air Manifold	1307403
73. Left Door	See Chart Pg. 35
74. Door Hinge Strip (2)	1308634
75. Right Door Air Manifold	1307404
77. Door Handle Assy w/Set Screw	30002721
78. Right Door II	See Chart Pg. 35
79. Door Gasket 5/16 Med. Density 6ND	1203588
80. Glass Gasket	1203556
81. Left Door Glass ²	1408630
82. Right Door Glass ²	1408629
83. Door Latch	1408628
84. Spacer 3/8 x 1-Z	1201779
85. Damper Ramp ¹	1301811
Socket Set Screw Adjuster	1200436
PH Flat Hd Screw	1200809
Hex Nuts	1203210
86. Handle Base Stub ³	30002714
87. Ceramic Handle 2.78 Lg ³	20006381
88. Handle Bolt ³	1201294
89. Friction Spring	1201846
90. Primary Air Cable w/Clips	5005471
91. 7/16-20 x 1 Socket Set Screw	1200334
92. Washer	1202471
93. Pin, Long, Door	30002727

1. Included in #5008649 upper fireback assembly.
2. Not interchangeable, due to a heat-reflective coating on the room side of the panels.
3. Included in #0004345 ceramic handle assembly.

Shell Enamel Parts - Encore Model 2550							
Part Name	Classic	Biscuit	Bordeaux	Chestnut Brown	Ebony	Midnight Blue	Vermont Green
Top	1306618	30003007	2328618	30003019	30003031	2378618	30003044
Front	1308635	30003004	2328635	30003016	30003028	2378635	30003041
Left Side	1308623	30003006	2328623	30003018	30003030	2378623	30003043
Right Side	1308619	30003005	2328619	30003017	30003029	2378619	30003042
Flue Collar	1304280	30003008	2324280	30003020	30003032	2374280	30003045
Ashlip	1307406	30003002	2377406	30003014	30003026	2377406	30003039
Left Door Sub Assy	5008648	30003012	30001144	30003024	30003037	30001345	30003049
Left Door	1308637	30003010	2328637	30003022	30003034	2378637	30003047
Right Door Sub Assy	5008647	30003011	30001143	30003023	30003036	30001344	30003048
Right Door	1308636	30003009	2328636	30003021	30003033	2378636	30003046
Single Leg	1307427	30003003	2327427	30003015	30003027	2377427	30003040

ENCORE 2550 HARDWARE

120-1745	¼ -20 x 1" Zinc Hex Head Leveller Bolt (1-in each of the four legs)	120-0334	7/16-20 x 1" Socket Set Screw (1-door insert for handle)
120-1337	¼ -20 x ⅜" Hex Head Cap Screw (2-left hinge plate, 2-right hinge plate)	120-0643	10-24 x 7/16" Black Socket Head Cap Screw (1-door handle stop)
120-2470	Washer, ¼ Plain Flat (2-ends to bottom, 2-upper firebk to back)	120-1392	¼ -20 x 2" Zinc Hex Head Cap Screw Gr 2 (1-air manifold to front)
120-8608	Pin, Hinge (1-ashdoor)	120-0992	10-24 x 1" Zinc Phillips Pan Head Screw (1-left manifold to door left screw, 2-right manifold to door)
30001749	Pin, Cotter (1-ashdoor hinge pin)	120-0991	10-24 x ¾" Zinc Phillips Pan Head Screw (1-left manifold to door right screw)
120-1376	¼ -20 x 1" Black Hex Head Cap Screw Gr 5 (2-right air plate, 2-left air plate)	120-2471	Washer, ¼" Flat .294 id x .620 od SS (primary air assembly)
30001794	¼ -20 x ⅜" Black Socket Head Cap Screw (1-primary air valve)	120-1373	¼ -20 x ⅝" SS Hex Head Cap Screw (2-andirons) {replaced 120-1340 - ½" June 05}
120-0896	¼ -20 x ⅝" Black Phillips Round Head Screw (2-primary air valve to bottom)	120-0881	¼ -20 x ¾" Phillips Flat Head Screw (1-top to front)
120-1374	¼ -20 X ¾" Hex Head Cap Screw (4-ashdrop to bottom, 3-hinge to ashdrop, 2-front to ends, 2-ends to bottom)	120-2473	Washer, Black ¼" Narrow Flat (2-ashpan bracket)
120-2474	Washer, Zinc ¼" Flat (3-ashdrop hinge, 4-ashdrop to bottom, 2-front to ends, 1-front to bottom, 2-left air plate, 2-right air plate, 2-top to ends, 4-front door hinge plates, 1-ashdoor adjust.)	120-0907	¼ -20 x 1" Black Phillips Round Head Screw (2-flue collar to top, 1-griddle handle)
120-0417	¼ -20 x ¼" Knl Cup Point Socket Set Screw (1-thermostat stub, 1-ashdoor pawl, 1-front door handle stub)	120-3329	Nut, ¼ -20 Plain Square (2-flue collar)
120-0563	5/16-16 x 5/16" Socket Set Screw (1-damper handle)	120-1396	¼ -20 x 1½" Zinc Hex Head Cap Screw Gr 5 (2-upper fireback to back)
120-0436	¼ -20 x 1" Oval Point Socket Set Screw (1-damper ramp adjuster)	120-1243	8-32 x 2" – Z Slot Round Head (1-thermostat knob)
120-0809	¼ -20 x 1" Phillips Flat Head Screw (1-damper ramp)	120-1986	Shim Ring, 18 Ga Nickel (1-secondary air flap)
120-3210	¼ -20 Hex Nut (2- top to ends, 2-damper ramp, 1-griddle handle stub, 1-ashdoor pawl, 1-front to bottom)	120-0980	10-24 x ¼" Phillips Pan Head Screw (3-glass clips right door, 4- glass clips left door, 2-secondary air assembly)
120-3290	⅝-16 Toplock Z Hex Head Jam Nut (1-ashdoor pawl)	120-4212	¼ -20 x 1¼" Threaded Rod (or 120-4214 – 1½") (2-top to ends)
120-1378	¼ -20 x 1¼" Hex Head Cap Screw (1-front to bottom)	120-1846	Friction Spring (1-primary air assembly)
120-1338	¼ -20 x ½" Hex Head Cap Screw (1-each griddle quad, 2-damper tabs ufb, 2-ashpan bracket, 1-damper rod stop)	120-0993	¼ -20 x ⅝" Phillips Pan Head Screw (2-secondary cover plate to back)
120-0482	¼ -20 x ½" Socket Flat Head Screw (2-ashlip)	120-2061	#10 x ¾" Black Phillips Pan Head SMS (3-flue collar to connector pipe)
120-1322	10-24 x ½" - Z inc Hex Head Cap Screw (4-heat shield taps in ashdrop)	120-1308	8-32 x 1" Zinc Slotted Pan Head Screw (1-griddle handle)
120-2488	Washer, Zinc ⅜" Flat (4-legs to bottom)	120-1310	¼ -20 x 3" Zinc Slotted Pan Head Screw (1-damper handle)
120-8610	⅝-16 x 1¼" Socket Head Allen Bolt (1-front left leg)	120-1294	¼ -20 x 3⅝" Zinc Slotted Pan Head Screw (1-fallaway handle)
120-1443	⅝-16 x 1¼" Zinc Hex Head Bolt (3-Leg Bolts)	120-4867	1/32" Stainless Steel Control Cable (3.7'-air thermostat)
120-0848	¼ -20 x 2" Black Phillips Flat Head Screw (2- side primary air cover plate to bottom)	120-4874	1/32" Oval Copper Sleeve (2-air thermostat control cable)
120-0998	10-24 x ½" Phillips Truss Head Screw (4-rear heat shield taps)	120-1899	5/16 Hole Plug (1-stove back)
120-1779	Spacer, 7/16" Narrow (1-damper rod)	120-1337	¼ -20 x ⅝" Hex Head Cap Screw (2-each door hinge strip)
120-2560	Washer, ⅜" Narrow (1-damper rod)	120-2907	Rivet, Pop 1/8 dia x 5/16 Grip (6-safety listing)
120-2423	Washer, Flat #10 SAE (2-under door latch)	160-0600	Handle Holder (1-right front leg)
		160-0547	Pin, Long (2-each door hinge)
		160-1488	Tab, Damper
		120-0983	10-24 x ⅝" Phillips Pan Head Screw (2-door latch to front)