 
 



Parts List

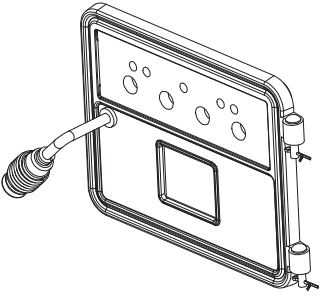


Door Assembly	
610178	1

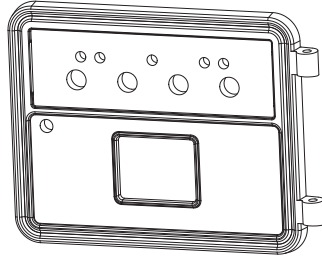


Feed Door	
40758	1

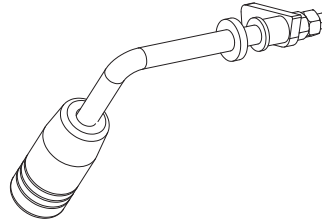 


Door Handle Assembly	
610186	1

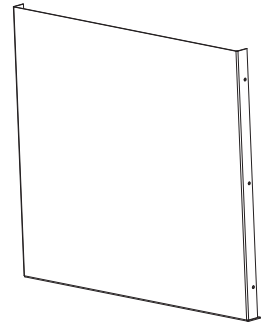 


Inner Heat Shield	
27356	1

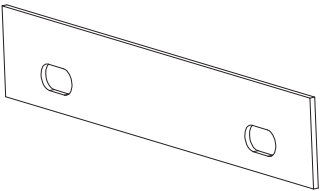 


Glass Retainer	
27367	2

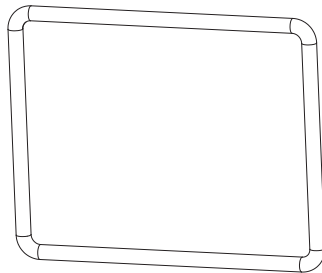 


Door Gasket (40758)	
88231	3.7 ft

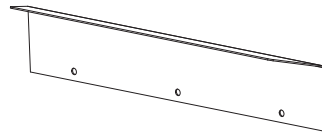 


Heat Shield Deflector	
27357	1

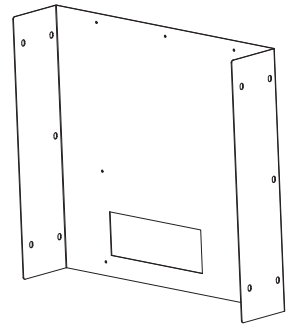 


Outer Heat Shield	
27355	1

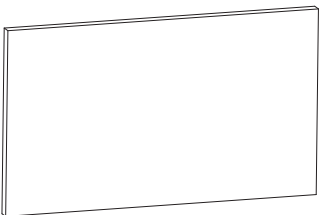 


C-Cast (14.25" X 8.31")	
88229	2

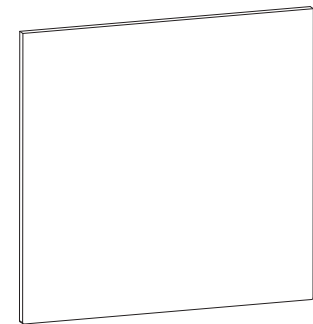 

Door Glass	
892544	1

 


Half Firebrick	
891414	3

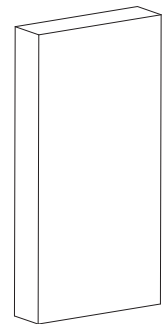 

Firebrick (4-1/2" X 9")	
89066	17

In order to maintain warranty, components must be replaced using original manufacturers parts purchased through your dealer or directly from the appliance manufacturer. Use of third party components will void the warranty.

 Parts List




Leg Weldment	
610176	4




Hearth Trim Channel	
86809	1



Top Trim Channel	
86805	1

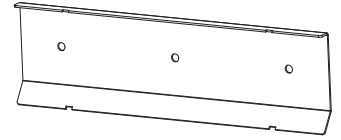 


Front SS Heat Shield	
27359	1

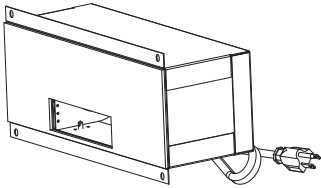 


F6 Blower Assembly	
F6	1




Cotter Pin	
83874	2

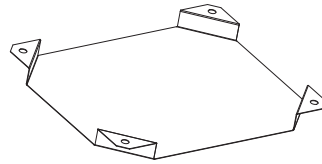 


Bottom Heat Shield	
27377	

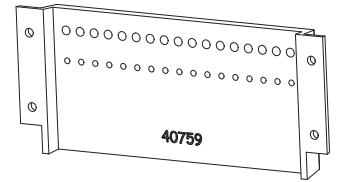 


Air Wash	
40759	1

 

Hinge Pin (.395" Dia. X 2)	
83660	2

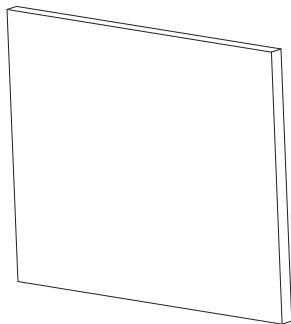 

Kao-Wool	
88230	1

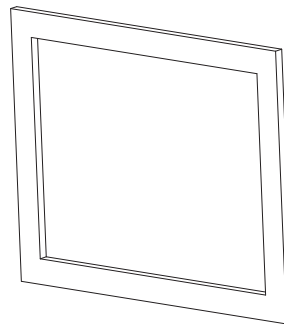 

Glass Gasket	
88232	1.4 ft

In order to maintain warranty, components must be replaced using original manufacturers parts purchased through your dealer or directly from the appliance manufacturer. Use of third party components will void the warranty.